

型号说明

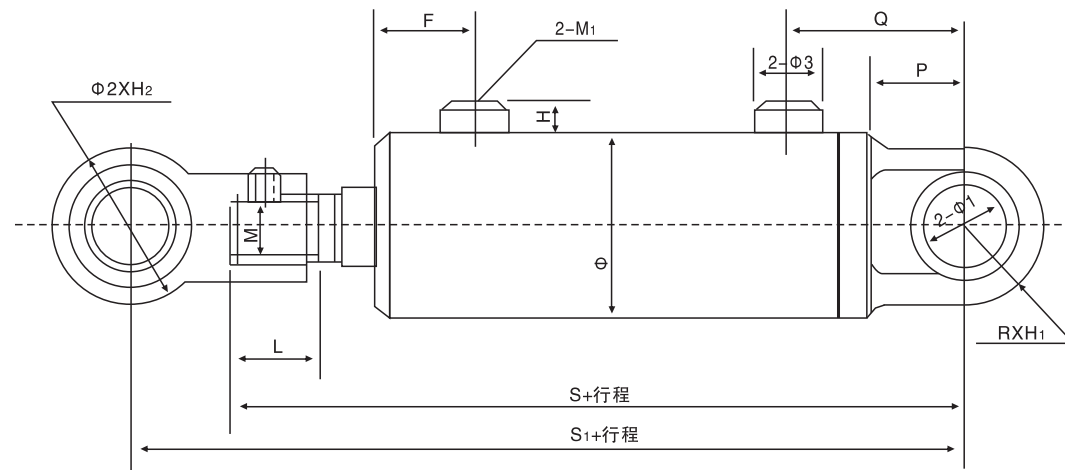
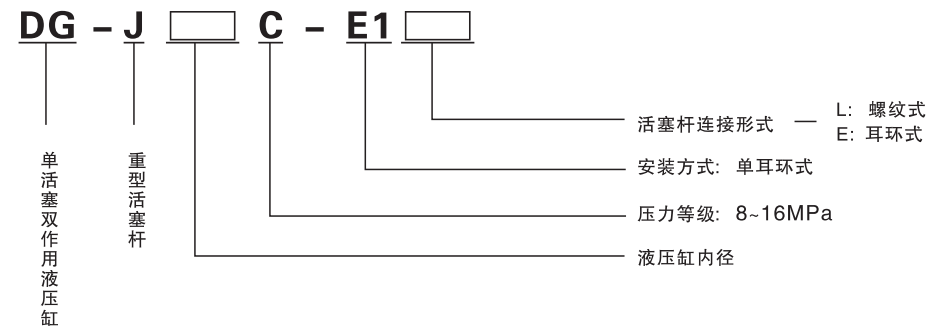


表16

液压缸内径D	Φ	M	L	Φ2 × H2	2-Φ1	R × H1	2-Φ3	2-M1	F	H	P	Q	S	S1
50	70	M24 × 1.5	33	56 × 40	20	25 × 28	30	M18 × 1.5(G3/8)	52	15	32	65	242	272
63	83	M30 × 2	36	60 × 60	32	30 × 40	35	M22 × 1.5(G1/2)	67	15	35	70	272	310
80	102	M42 × 2	42	80 × 75	40	40 × 50	35	M22 × 1.5(G1/2)	70	15	50	85	308	359
100	127	M48 × 2	62	100 × 95	50	50 × 63	45	M27 × 2(G3/4)	81	20	60	102	369	427
110	140	M56 × 2	70	115 × 105	55	55 × 75	45	M27 × 2(G3/4)	85	20	65	118	404	472
125	159	M64 × 3	73	124 × 118	63	62 × 80	45	M27 × 2(G3/4)	90	20	70	129	421	486
140	168	M72 × 3	75	130 × 125	65	71 × 80	55	M33 × 2(G1)	95	20	80	144	460	540
150	185	M80 × 3	80	140 × 135	71	80 × 85	55	M33 × 2(G1)	101	20	81	145	481	565
160	194	M80 × 3	85	160 × 145	80	90 × 95	55	M33 × 2(G1)	115	20	90	168	528	613
180	219	M90 × 3	95	179 × 160	90	100 × 105	65	M42 × 2(G1,4)	126	20	105	185	606	716
200	245	M100 × 3	105	184 × 170	100	100 × 120	65	M42 × 2(G1,4)	157	20	110	200	680	800
220	273	M110 × 3	112	200 × 120	100	200 × 120	65	M42 × 2(G1,4)	157	20	120	200	693	811
250	299	M125 × 4	125	220 × 130	110	110 × 136	65	M42 × 2(G1,4)	157	20	130	210	716	831
320	402	M160 × 4	166	280 × 170	140	140 × 176	70	M48 × 2(G1,4)	200	24	160	264	847	1017